

Work Order ID 123125

Tuesday, July 29, 2014 2:31:59 PM

123125

Page 1

Item ID: D4897-045 Accept ***N900040100*** Setup Start ***NS1***
Revision ID: Stop ***NS2***
Item Name: Dome Light Wiring
Start Date: 7/29/14 Start Qty: 4.00 ***4*** Cust Item ID:
Required Date: 7/29/14 Req'd Qty: 4.00 ***4*** Customer:
Reference:

Approvals: Process Plan: J.A Date: 14/07/30 Tooling: _____ Date: _____ Run Start ***NR1***
QC: _____ Date: _____ SPC (Y/N): _____ Date: _____ Stop ***NR2***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
--------------------------------	--------------------------	----------------------	---------	--------	--------------	---------------	---------------	------------------	----------------

Draw Nbr	Revision Nbr
D4897	A

100

0.00

100

PURCHASING

0.00

Purchasing

Memo

Purchasing

Issue P/O: 25284

Order from Eagle
Specification as per dwg D4897-045
C OF C IS REQUIRED

CY 14/08/01 (4)

110

Receive & Inspect for Damage & Mat'l Certs

0.00

110

0.00

Packaging

Memo

Packaging

Ensure material release note is attached

4x 8014-8-18

DQA:

Date: 14/08/27



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed:

Date: 14/8/26

Work Order update only ☐

Work Order: 123125	DISPOSITION Rework <input type="checkbox"/> Scrap <input type="checkbox"/> Use-as-is <input checked="" type="checkbox"/> Suspected Unapproved <input type="checkbox"/>	AGAINST DEPARTMENT/PROCESS			
Part No. D4897-045		Skid-tube <input type="checkbox"/>	Crosstube <input type="checkbox"/>	Water Jet <input type="checkbox"/>	Engineering <input type="checkbox"/>
NCR No. 14-4170		Machining <input type="checkbox"/>	Small Fab <input type="checkbox"/>	Prod. Eng. Coord. <input type="checkbox"/>	Quality <input type="checkbox"/>
		Thermoforming <input type="checkbox"/>	Finishing <input type="checkbox"/>	Rec/Store/Packaging <input type="checkbox"/>	Other <input type="checkbox"/>
		Large Fab <input type="checkbox"/>	Composite <input type="checkbox"/>	Supplier <input type="checkbox"/>	

Root Cause		Date	Step	Qty	Description of work order update or non-conformance	Initial Chief Eng	Action Description	Sign & Date	Verification	QC Inspector
Design		14/8/8	100	4	Dwg D4897 Rev.A has a typo. "Chapter 98" should read "Chapter 25"	DAS 12 9-89 14/8/8	Assemble per Chapter 25 of 1CA129-Z	DAS 12 9-89 14/8/8	DAS 38 9-89 14-08-19	DAS 9 9-89 14-08-19
Doc/Data										
Equip/Tooling										
Handling/Pre										
Material										
Operator										
Offset/Setup										
Process										
Supplier										
Training										
Transport										
Unapproved										

FAULT CATEGORY

Landing Gear <input type="checkbox"/> Bending <input type="checkbox"/> Centre Not Concentric <input type="checkbox"/> Cracks <input type="checkbox"/> Crimp/Kink/Ripple/Wave <input type="checkbox"/> Cuffs <input type="checkbox"/> Crushing <input type="checkbox"/> Heat Treat <input type="checkbox"/> Inspection Strip in Tube <input type="checkbox"/> Marks/Chatter <input type="checkbox"/> Turning Sequence <input type="checkbox"/> Wave/Twist in Tube	General <input type="checkbox"/> Bend <input type="checkbox"/> BOM/Route <input type="checkbox"/> Broken/Damage/Defect <input type="checkbox"/> Burrs <input type="checkbox"/> Contamination <input type="checkbox"/> Countersink <input type="checkbox"/> Cut Too Short <input type="checkbox"/> Drawing <input type="checkbox"/> Drill Holes <input type="checkbox"/> Finish <input type="checkbox"/> Fit/Function	<input type="checkbox"/> Folio/Program <input type="checkbox"/> Grain <input type="checkbox"/> Hardware <input type="checkbox"/> Inspection Incomplete/Unqualified <input type="checkbox"/> Instructions Incomplete/Unclear <input type="checkbox"/> Misaligned/off center <input type="checkbox"/> Mislabeled <input type="checkbox"/> Misread <input type="checkbox"/> Off-set <input type="checkbox"/> Out of Calibration <input type="checkbox"/> Out of Sequence	<input type="checkbox"/> Outside Dimensions <input type="checkbox"/> Over/Under tolerance <input type="checkbox"/> Part Incorrect <input type="checkbox"/> Part Lost/Missing <input type="checkbox"/> Part Moved <input type="checkbox"/> Positioned Wrong <input type="checkbox"/> Power Loss/Surge	<input type="checkbox"/> Pressure/Forced <input type="checkbox"/> Set-up <input type="checkbox"/> Temperature/Cure <input type="checkbox"/> Weld <input type="checkbox"/> Wrong Stock Pulled <input type="checkbox"/> Other
----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Work Order ID 123125

Tuesday, July 29, 2014 2:31:59 PM

123125

Page 2

Item ID: D4897-045 Accept ***N900040100*** Setup Start ***NS1***
Revision ID: Stop ***NS2***
Item Name: Dome Light Wiring
Start Date: 7/29/14 Start Qty: 4.00 ***4*** Cust Item ID:
Required Date: 7/29/14 Req'd Qty: 4.00 ***4*** Customer:
Reference:

Approvals: Process Plan: _____ Date: _____ Tooling: _____ Date: _____ Run Start ***NR1***
QC: _____ Date: _____ SPC (Y/N): _____ Date: _____ Stop ***NR2***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
120	QC6- Inspect dimensions to drawing	0.00							
120									
QC	Memo	0.00							
Quality Control									
130	Identify as per dwg & Stock Location: <i>MF</i>	0.00							
130									
Packaging	Memo	0.00							
Packaging									
140	QC21- Final Inspection - Work Order Release	0.00							
140									
QC	Memo	0.00							
Quality Control									

(4) **DAS 9 9-89** **DAS 38 9-89** *12/08/19*

HY **DAS 28 9-89** **AUG 19 2014**

MLJ 14-08-20

(14-8-19)

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework <input type="checkbox"/> Scrap <input type="checkbox"/> Use-as-is <input type="checkbox"/> Suspected Unapproved <input type="checkbox"/>	AGAINST DEPARTMENT/PROCESS <div style="display: flex; justify-content: space-between;"> <div> Skid-tube <input type="checkbox"/> Machining <input type="checkbox"/> Thermoforming <input type="checkbox"/> Large Fab <input type="checkbox"/> </div> <div> Crosstube <input type="checkbox"/> Small Fab <input type="checkbox"/> Finishing <input type="checkbox"/> Composite <input type="checkbox"/> </div> <div> Water Jet <input type="checkbox"/> Prod. Eng. Coord. <input type="checkbox"/> Rec/Store/Packaging <input type="checkbox"/> Supplier <input type="checkbox"/> </div> <div> Engineering <input type="checkbox"/> Quality <input type="checkbox"/> Other <input type="checkbox"/> </div> </div>
--------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Root Cause	Date	Step	Qty	Description of work order update or non-conformance	Initial Chief Eng	Action Description	Sign & Date	Verification	QC Inspector
Design									
Doc/Data									
Equip/Tooling									
Handling/Pre									
Material									
Operator									
Offset/Setup									
Process									
Supplier									
Training									
Transport									
Unapproved									

FAULT CATEGORY

Landing Gear <input type="checkbox"/> Bending <input type="checkbox"/> Centre Not Concentric <input type="checkbox"/> Cracks <input type="checkbox"/> Crimp/Kink/Ripple/Wave <input type="checkbox"/> Cuffs <input type="checkbox"/> Crushing <input type="checkbox"/> Heat Treat <input type="checkbox"/> Inspection Strip in Tube <input type="checkbox"/> Marks/Chatter <input type="checkbox"/> Turning Sequence <input type="checkbox"/> Wave/Twist in Tube	General <input type="checkbox"/> Bend <input type="checkbox"/> BOM/Route <input type="checkbox"/> Broken/Damage/Defect <input type="checkbox"/> Burrs <input type="checkbox"/> Contamination <input type="checkbox"/> Countersink <input type="checkbox"/> Cut Too Short <input type="checkbox"/> Drawing <input type="checkbox"/> Drill Holes <input type="checkbox"/> Finish <input type="checkbox"/> Fit/Function	<input type="checkbox"/> Folio/Program <input type="checkbox"/> Grain <input type="checkbox"/> Hardware <input type="checkbox"/> Inspection Incomplete/Unqualified <input type="checkbox"/> Instructions Incomplete/Unclear <input type="checkbox"/> Misaligned/off center <input type="checkbox"/> Mislabeled <input type="checkbox"/> Misread <input type="checkbox"/> Off-set <input type="checkbox"/> Out of Calibration <input type="checkbox"/> Out of Sequence	<input type="checkbox"/> Outside Dimensions <input type="checkbox"/> Over/Under tolerance <input type="checkbox"/> Part Incorrect <input type="checkbox"/> Part Lost/Missing <input type="checkbox"/> Part Moved <input type="checkbox"/> Positioned Wrong <input type="checkbox"/> Power Loss/Surge <input type="checkbox"/> Pressure/Forced <input type="checkbox"/> Set-up <input type="checkbox"/> Temperature/Cure <input type="checkbox"/> Weld <input type="checkbox"/> Wrong Stock Pulled <input type="checkbox"/> Other
----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Picklist Print

Tuesday, July 29, 2014 2:31:58 PM

Page 1

Work Order ID: 123125

123125

Parent Item: D4897-045

D4897-045

Parent Item Name: Dome Light Wiring

Start Date: 7/29/14

Required Date: 7/29/14

Start Qty: 4.00

Required Qty: 4.00

Comments: IPP Rev a New Issue 13/09/25 VERF:DD

Component Item ID/ Item Name	Replacement Item ID	Mfg/ Purch	Bin Item	Primary Location	Last Location	Route Seq ID	Unit of Measure	Qty on Hand	Qty per Kit	Total Qty	Qty Issued	Date Issued	Status
---------------------------------	------------------------	---------------	-------------	---------------------	------------------	-----------------	--------------------	----------------	-------------	--------------	---------------	----------------	--------

D4897-045P

Purchased

No

Each

0.0000

4

D4897-045P

Dome Light Wiring

4x 8014-8-18

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐


Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework <input type="checkbox"/> Scrap <input type="checkbox"/> Use-as-is <input type="checkbox"/> Suspected Unapproved <input type="checkbox"/>	AGAINST DEPARTMENT/PROCESS <div style="display: flex; justify-content: space-between;"> <div> Skid-tube <input type="checkbox"/> Machining <input type="checkbox"/> Thermoforming <input type="checkbox"/> Large Fab <input type="checkbox"/> </div> <div> Crosstube <input type="checkbox"/> Small Fab <input type="checkbox"/> Finishing <input type="checkbox"/> Composite <input type="checkbox"/> </div> <div> Water Jet <input type="checkbox"/> Prod. Eng. Coord. <input type="checkbox"/> Rec/Store/Packaging <input type="checkbox"/> Supplier <input type="checkbox"/> </div> <div> Engineering <input type="checkbox"/> Quality <input type="checkbox"/> Other <input type="checkbox"/> </div> </div>
--------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Root Cause	Date	Step	Qty	Description of work order update or non-conformance	Initial Chief Eng	Action Description	Sign & Date	Verification	QC Inspector
Design									
Doc/Data									
Equip/Tooling									
Handling/Pre									
Material									
Operator									
Offset/Setup									
Process									
Supplier									
Training									
Transport									
Unapproved									

FAULT CATEGORY

Landing Gear <input type="checkbox"/> Bending <input type="checkbox"/> Centre Not Concentric <input type="checkbox"/> Cracks <input type="checkbox"/> Crimp/Kink/Ripple/Wave <input type="checkbox"/> Cuffs <input type="checkbox"/> Crushing <input type="checkbox"/> Heat Treat <input type="checkbox"/> Inspection Strip in Tube <input type="checkbox"/> Marks/Chatter <input type="checkbox"/> Turning Sequence <input type="checkbox"/> Wave/Twist in Tube	General <input type="checkbox"/> Bend <input type="checkbox"/> BOM/Route <input type="checkbox"/> Broken/Damage/Defect <input type="checkbox"/> Burrs <input type="checkbox"/> Contamination <input type="checkbox"/> Countersink <input type="checkbox"/> Cut Too Short <input type="checkbox"/> Drawing <input type="checkbox"/> Drill Holes <input type="checkbox"/> Finish <input type="checkbox"/> Fit/Function	<input type="checkbox"/> Folio/Program <input type="checkbox"/> Grain <input type="checkbox"/> Hardware <input type="checkbox"/> Inspection Incomplete/Unqualified <input type="checkbox"/> Instructions Incomplete/Unclear <input type="checkbox"/> Misaligned/off center <input type="checkbox"/> Mislabeled <input type="checkbox"/> Misread <input type="checkbox"/> Off-set <input type="checkbox"/> Out of Calibration <input type="checkbox"/> Out of Sequence	<input type="checkbox"/> Outside Dimensions <input type="checkbox"/> Over/Under tolerance <input type="checkbox"/> Part Incorrect <input type="checkbox"/> Part Lost/Missing <input type="checkbox"/> Part Moved <input type="checkbox"/> Positioned Wrong <input type="checkbox"/> Power Loss/Surge <input type="checkbox"/> Pressure/Forced Set-up <input type="checkbox"/> Temperature/Cure <input type="checkbox"/> Weld <input type="checkbox"/> Wrong Stock Pulled <input type="checkbox"/> Other
----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

ITEM NO.	QTY -041	PART NUMBER	DESCRIPTION	SUPPLIER
1	X	D4897-041	DOME LIGHT WIRING HARNESS	DART
2	2	D4872-1	LIGHT FIXTURE	DART
3	1	D4864-1	RHEOSTAT	DART
4	4	D4290-21	RING TERMINAL	DART
5	1	1-480305-0	CONNECTOR, PLUG	AMP
6	3	60618-1	CONTACT, PIN	AMP

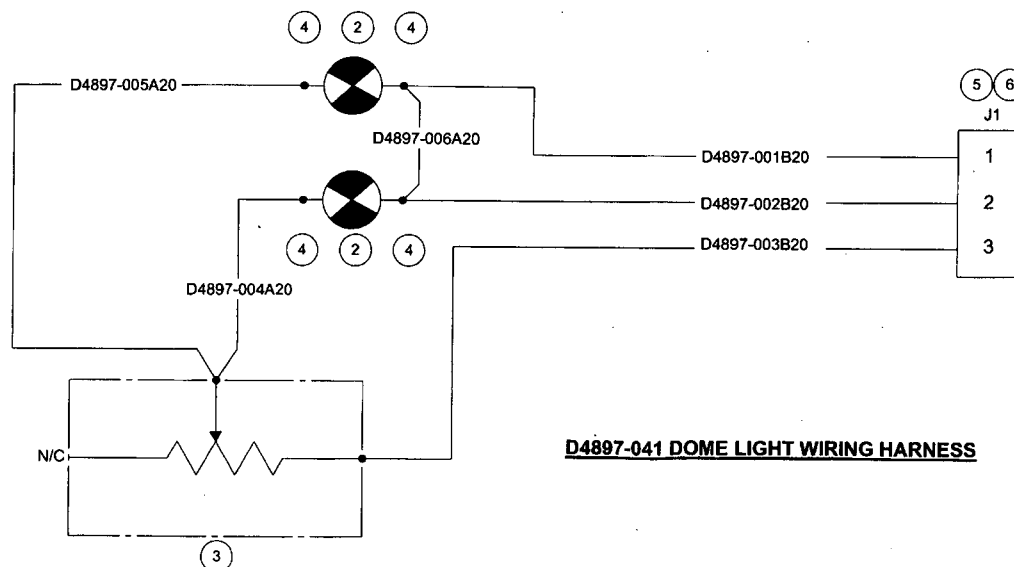

WIRE NUMBER	LENGTH (in)
D4897-001B20	7.0
D4897-002B20	7.0
D4897-003B20	5.5
D4897-004A20	4.0
D4897-005A20	4.0
D4897-006A20	9.0

D4897-041 DOME LIGHT WIRING HARNESS

RELEASED
2013-09-16


J.A 14/67/30 123125

- NOTES:**
- 1) ALL NEW UNSHIELDED WIRE USE M22759/41-xx-9 TYPE WIRE UNLESS OTHERWISE SPECIFIED
 - 2) ALL WIRES 20 AWG UNLESS OTHERWISE SPECIFIED
 - 3) IDENTIFY/CODE ALL WIRES AND CABLES IN ACCORDANCE WITH AC43.13-1B, SECTION 16, WIRE MARKING
 - 4) KEEP ALL JUMPERS AS SHORT AS POSSIBLE
 - 5) ALL TERMINALS TO BE INSTALLED IN ACCORDANCE WITH EUROCOPTER STANDARD PRACTICES MANUAL 20.80.20
 - 6) ALL CONNECTORS TO BE INSTALLED IN ACCORDANCE WITH TYCO ELECTRONICS INSTRUCTION SHEET 408-7201 DETENT-ENGAGEMENT MATE-N-LOCK CONNECTORS
 - 7) ROUTE ALL WIRES AND CABLES IN ACCORDANCE WITH CHAPTER 98 OF ICA129-2
 - 8) UNITS: INCHES UNLESS OTHERWISE NOTED
 - 9) IDENTIFY CONNECTORS WITH SHRINK SLEEVE LABELS IN ACCORDANCE WITH AC43.13-1B, SECTION 16, WIRE MARKING

REV.	NEW ISSUE	DESCRIPTION	BY	DATE
DESIGN	OS	DART AEROSPACE USA, INC. KENT, WA	OS	13.07.24
DRAWN	OS			
CHECKED	CB			
MFG. APPR.	W			
APPROVED	W	DRAWING NO.	REV. A	
DE APPR.	W	D4897		SHEET 1 OF 3
DATE	13.07.24	TITLE	SCALE	
		DOM LIGHT WIRING HARNESS		

COPYRIGHT © 2013 BY DART AEROSPACE USA, INC.
THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.

ITEM NO.	QTY -043	PART NUMBER	DESCRIPTION	SUPPLIER
1	X	D4897-043	DOMELIGHT WIRING HARNESS	DART
2	2	D4872-1	LIGHT FIXTURE	DART
3	2	D4864-3	RHEOSTAT	DART
4	4	D4290-21	RING TERMINAL	DART
5	1	1-480305-0	CONNECTOR, PLUG	AMP
6	3	60618-1	CONTACT, PIN	AMP

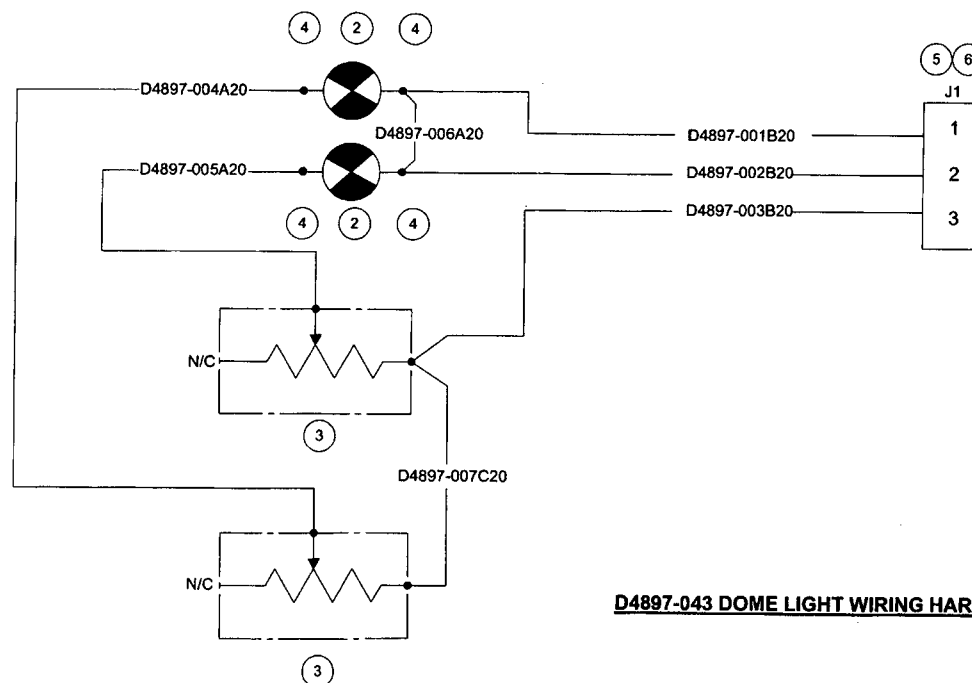

WIRE NUMBER	LENGTH (in)
D4897-001B20	7.0
D4897-002B20	7.0
D4897-003B20	5.5
D4897-004A20	4.0
D4897-005A20	4.0
D4897-006A20	8.0
D4897-007C20	7.5

D4897-043 DOME LIGHT WIRING HARNESS


RELEASED
2013-09-16
MP

- NOTES:
- 1) ALL NEW UNSHIELDED WIRE USE M22759/41-xx-9 TYPE WIRE UNLESS OTHERWISE SPECIFIED
 - 2) SOLDERABILITY CAN BE ACHIEVED WITH THE PROPER SOLDER.
 - 3) ALL WIRES 20 AWG UNLESS OTHERWISE SPECIFIED
 - 4) IDENTIFY/CODE ALL WIRES AND CABLES IN ACCORDANCE WITH AC43.13-1B, SECTION 16, WIRE MARKING
 - 5) KEEP ALL JUMPERS AS SHORT AS POSSIBLE.
 - 6) ALL TERMINALS TO BE INSTALLED IN ACCORDANCE WITH EUROCOPTER STANDARD PRACTICES MANUAL 20.80.20
 - 7) ALL CONNECTORS TO BE INSTALLED IN ACCORDANCE WITH TYCO ELECTRONICS INSTRUCTION SHEET 408-7201 DETENT-ENGAGEMENT MATE-N-LOCK CONNECTORS
 - 8) ROUTE ALL WIRES AND CABLES IN ACCORDANCE WITH CHAPTER 98 OF ICA129-2.
 - 9) UNITS: INCHES UNLESS OTHERWISE NOTED
 - 10) IDENTIFY CONNECTORS WITH SHRINK SLEEVE LABELS IN ACCORDANCE WITH AC43.13-1B, SECTION 16, WIRE MARKING

DESIGN	OS	DART AEROSPACE USA, INC.	
DRAWN	OS	KENT, WA	
CHECKED	CB	DRAWING NO.	REV. A
MFG. APPR.	U	D4897	SHEET 2 OF 3
APPROVED	U	TITLE	SCALE
DE APPR.	U	DOME LIGHT WIRING HARNESS	
DATE	13.07.24	COPYRIGHT © 2013 BY DART AEROSPACE USA, INC.	

THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.

ITEM NO.	QTY -045	PART NUMBER	DESCRIPTION	SUPPLIER
1	X	D4897-045	DOMELIGHT WIRING HARNESS	DART
2	1	1-480303-0	CONNECTOR, SOCKET	AMP
3	3	60617-1	CONTACT, SOCKET	AMP
4	3	8-320559-2	SPLICE	AMP

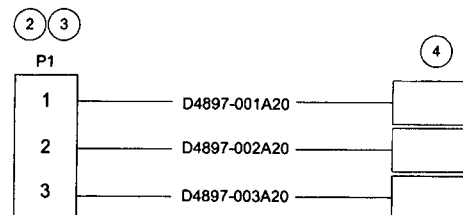

WIRE NUMBER	LENGTH (in)
D4897-001A20	4.0
D4897-002A20	4.0
D4897-003A20	4.0

D4897-045 DOME LIGHT WIRING HARNESS

TYPD, SHOULD READ "CHAPTER 25"

REF WID CHG 123125, PO 25284

P14/2/8

DAS
12
9-89

RELEASED
2013-09-16

- NOTES:
- 1) ALL NEW UNSHIELDED WIRE USE M22759/41-xx-9 TYPE WIRE UNLESS OTHERWISE SPECIFIED
 - 2) SOLDERABILITY CAN BE ACHIEVED WITH THE PROPER SOLDER.
 - 3) ALL WIRES 20 AWG UNLESS OTHERWISE SPECIFIED
 - 4) IDENTIFY/CODE ALL WIRES AND CABLES IN ACCORDANCE WITH AC43.13-1B, SECTION 16, WIRE MARKING
 - 5) KEEP ALL JUMPERS AS SHORT AS POSSIBLE.
 - 6) ALL TERMINALS TO BE INSTALLED IN ACCORDANCE WITH EUROCOPTER STANDARD PRACTICES MANUAL 20.80.20
 - 7) ALL CONNECTORS TO BE INSTALLED IN ACCORDANCE WITH TYCO ELECTRONICS INSTRUCTION SHEET 408-7201 DETENT-ENGAGEMENT MATE-N-LOCK CONNECTORS
 - 8) ROUTE ALL WIRES AND CABLES IN ACCORDANCE WITH CHAPTER 28 OF ICA129-2.
 - 9) UNITS: INCHES UNLESS OTHERWISE NOTED.
 - 10) IDENTIFY CONNECTORS WITH SHRINK SLEEVE LABELS IN ACCORDANCE WITH AC43.13-1B, SECTION 16, WIRE MARKING

DESIGN	CB	DART AEROSPACE USA, INC.	REV. A
DRAWN	CB	KENT, WA	
CHECKED	CB	DRAWING NO.	SHEET 3 OF 3
MFG. APPR.	CB	D4897	
APPROVED	CB	TITLE	SCALE
DE APPR.	CB	DOMELIGHT WIRING HARNESS	
DATE	13.07.24	COPYRIGHT © 2013 BY DART AEROSPACE USA, INC. THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.	



Dart Aerospace Ltd.
1270 Aberdeen Street
Hawkesbury, ON K6A 1K7
Tel: 613 632 9577
Fax: 613 632 1053

PURCHASE ORDER

Purchase Order ID **PO25284**

Purchase Order Date 8/1/2014

PO Print Date 8/1/2014

Page Number 1 of 2

Order From : VU-EAG002

EAGLE COPTERS MAINTENANCE LTD.
823 MCTAVISH ROAD N E
CALGARY, AB T2E 7G9
CA

Ship To : DART AEROSPACE LTD

1270 ABERDEEN
HAWKESBURY, ON K6A 1K7
CANADA

Contact Name

Vendor Phone 403-250-7370

Ship To Contact

Ship To Phone

Ship Via: FedEx Overnight collect

Ship Acct:

Buyer

Chantal Lavoie

Customer POID

Customer Tax # 10127-2607

Terms Net 30

Currency USD

FOB Destination-Collect

Line Nbr	Reference Vendor Part Number Line Comments Delivery Comments	Description/ Mfg ID	Req Date/ Taxable Promise Date	CD	Req Qty/ Unit of Measure	PO Unit Price	Extended Price
1	D4897-045P	Dome Light Wiring	8/20/2014 Yes 8/20/2014		4.00 Each	\$180.00	\$720.00
AS PER DWG D4897 REV. A B123125							
Line Total:							\$720.00
2	71401-45	PROCUREMENT QUALITY CLAUSES	8/20/2014 No 8/20/2014		1.00	\$0.00	\$0.00
Procurement Quality Clauses A005 RIGHT OF ENTRY A007 FIRST ARTICLE INSPECTION (FAI) BY SELLER, (DOCUMENTATION MAINTAINED BY SUPPLIER) A016 PERSONNEL QUALIFICATION A018 ELECTRICAL EQUIPMENT A025 CERTIFICATE OF CONFORMANCE A040 NOTIFICATION OF QUALITY ESCAPE A041 QUALITY MANAGEMENT SYSTEM A042 DART NOTIFICATION BY SUPPLIER A043 RETENTION OF QUALITY DOCUMENTS							

8814-8-18

Note:

8/1/2014



Dart Aerospace Ltd.
1270 Aberdeen Street
Hawkesbury, ON K6A 1K7
Tel: 613 632 9577
Fax: 613 632 1053

PURCHASE ORDER

Purchase Order ID **PO25284**

Purchase Order Date 8/1/2014

PO Print Date 8/1/2014

Page Number 2 of 2

Order From : VU-EAG002

EAGLE COPTERS MAINTENANCE LTD.
823 MCTAVISH ROAD N E
CALGARY, AB T2E 7G9
CA

Ship To : DART AEROSPACE LTD

1270 ABERDEEN
HAWKESBURY, ON K6A 1K7
CANADA

Contact Name

Vendor Phone 403-250-7370

Ship To Contact

Ship To Phone

Ship Via: FedEx Overnight collect

Ship Acct:

Buyer

Chantal Lavoie

Customer POID

Customer Tax # 10127-2607

Terms Net 30

Currency USD

FOB Destination-Collect

Line Total: \$0.00

PO Total: \$720.00

Note: Terms & Condition of Purchasing(Suppliers) and Procurement Quality Clauses are an integral part of our AS9100 requirements. To learn in detail, please visit www.dartaerospace.com for further explanation.

Change Nbr:

2

Change Date:

8/1/2014

PACKING SLIP

DATE: 14 Aug 14

FROM: Eagle Copters Maintenance Ltd.

823 McTavish Rd. NE

Calgary, AB, Canada

T2E 7G9

SHIP TO : Dart Aerospace Ltd.

1270 Aberdeen Street

Hawkesbury ON Canada

K6A 1K7

[illegible]

CERTIFICATE OF CONFORMANCE

☒

I Hereby certify that the aircraft parts described hereon were aquired from a source of supply that is consistant with the conditions under which Transport Canada Approved Distributor approval 6-81 has been granted

AUTHORIZED INSPECTOR:



979042

N° DE COMMANDE ORDER NO.		SERV. DEPT.		DATE	
P10: 25114				14/07/23	
VENDU À SOLD TO			EXPÉDIER À SHIP TO		
			Cagle Copters		
ADRESSE ADDRESS			ADRESSE ADDRESS		
			823 Tractawish RD		
			Calgary AB T2E-7C9		
DATE D'EXPÉDITION SHIPPING DATE		VIA	CONDITIONS TERMS	N° DE TAXE TAX REG. NO.	VENDU PAR SOLD BY
			aten	CUC	

[illegible]

FORMULAIRE DE VENTE

SALES ORDER

STAPLES 82B



DART AEROSPACE USA, INC.
19717 62nd Ave. South
Suite E-101
Kent, WA 98032

Tel: 1 613 632 5200
Fax: 1 613 632 5246


e-mail: heli@dartaero.com
<http://www.dartaero.com>


INSTRUCTIONS FOR CONTINUED AIRWORTHINESS


ICA129-2

Dome Light Air Vent

EUROCOPTER AS350 MODELS

Prepared By: 
V. Seib
Mechanical Designer

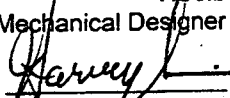Checked By: 
H. Siemens
Mechanical Designer

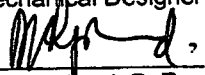Released By: 
D. Shepherd, P. Eng
DE #02

• COPYRIGHT © 2013 BY DART AEROSPACE USA, INC. •
THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED
OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.

Revision: 0

REVISION RECORD

Revision	Issue Date	Description
N/C	11.10.14	New Issue
0	13.07.02	Update to Dart format, Add parts list

LIST OF EFFECTIVE PAGES

DESCRIPTION	PAGE(S)	REVISION
COVER	1	0
REVISION RECORD	2	0
LIST OF EFFECTIVE PAGES	3	0
TABLE OF CONTENTS	4	0
CHAPTER 1 – INTRODUCTION	5	0
CHAPTER 1 – INTRODUCTION	6	0
CHAPTER 4 – AIRWORTHINESS LIMITATIONS	7	0
CHAPTER 5 – INSPECTION REQUIREMENTS	8	0
CHAPTER 8 – LEVELING AND WEIGHING	9	0
CHAPTER 25 – EQUIPMENT AND FURNISHINGS	10	0
CHAPTER 25 – EQUIPMENT AND FURNISHINGS	11	0
CHAPTER 25 – EQUIPMENT AND FURNISHINGS	12	0
CHAPTER 25 – EQUIPMENT AND FURNISHINGS	13	0
CHAPTER 25 – EQUIPMENT AND FURNISHINGS	14	0
CHAPTER 25 – EQUIPMENT AND FURNISHINGS	15	0
CHAPTER 25 – EQUIPMENT AND FURNISHINGS	16	0
CHAPTER 25 – EQUIPMENT AND FURNISHINGS	17	0
CHAPTER 25 – EQUIPMENT AND FURNISHINGS	18	0
CHAPTER 25 – EQUIPMENT AND FURNISHINGS	19	0
CHAPTER 25 – EQUIPMENT AND FURNISHINGS	20	0
CHAPTER 25 – EQUIPMENT AND FURNISHINGS	21	0

TABLE OF CONTENTS

1.0	INTRODUCTION (01-00-00)	5
1.1.	SCOPE	5
1.2.	ARRANGEMENT	5
1.3.	DISTRIBUTION	5
1.4.	COMPATIBILITY	5
1.5.	SYSTEM DESCRIPTION	6
4.0	AIRWORTHINESS LIMITATIONS (04-00-00)	7
5.0	INSPECTION REQUIREMENTS (05-00-00)	8
5.1.	12 MONTH/1000 HOUR INSPECTION	8
5.2.	OVERHAUL SCHEDULE	8
8.0	LEVELING AND WEIGHING (08-00-00)	9
25.0	EQUIPMENT AND FURNISHINGS (25-00-00)	10
25.1.	D350-833-011/-013/-015/-017 DOME LIGHT AIR VENT REMOVAL	10
25.2.	D350-833-011/-013/-015/-017 DOME LIGHT AIR VENT REINSTALLATION	10
25.3.	D350-833-019 NVIS FILTER REMOVAL	19
25.4.	D350-833-019 NVIS FILTER REINSTALLATION	19
25.5.	PARTS LIST	21

1.0 INTRODUCTION (01-00-00)

1.1. SCOPE

This manual provides the requirements set forth in Appendix A of FAR Part 27 for the Instructions for Continued Airworthiness of the Dart D350-833-011/-013/-015/-017/-019 Dome Light Air Vent kits. These Instructions for Continued Airworthiness are to be referred to for inspection and maintenance when the Dart Dome Light Air Vent kits are installed on, removed from, or in service on the AS350 rotorcraft.

1.2. ARRANGEMENT

This manual is arranged in the ATA-100 format. This manual is only applicable to Eurocopter AS350 model aircraft when the Dart D350-833-011/-013/-015/-017/-019 Dome Light Air Vent kits are installed on, in service on or removed from these aircraft.

There are no abbreviations, acronyms, or symbolization which are not common to the aviation industry in this manual.

Units of measurement are expressed in Imperial and metric values and all torque values are standard values for the specified fastener combinations as defined in FAA AC 43.13, unless otherwise specified in this document.

No other Instructions for Continued Airworthiness for any product or appliance is inferred or addressed herein.

1.3. DISTRIBUTION

Any changes in the content or revision level of this document will be made available to any owner/operator at www.dartaero.com.

Additionally, any changes will be sent to the FAA. All changes will be recorded in the Record of Revisions page at the front of this manual.

1.4. COMPATIBILITY

Compatibility of this installation with the aircraft is the **responsibility of the installer**. Ensure that this installation does not conflict with a previous modification.

• COPYRIGHT © 2013 BY DART AEROSPACE USA, INC. •
THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.

Revision: 0

01-00-00

1.5. SYSTEM DESCRIPTION

The Dart D350-833-011/-013/-015/-017/-019 Dome Light Air Vent kits are used to directly replace the Eurocopter AS350 Dome Light Air Vent Assembly by mounting two new air vents and light fixtures to the cabin roof of the Eurocopter AS350 aircraft. These kits come in different configurations for the various AS350 models as follows:

- **D350-833-011 Dome Light Air Vent**

A direct replacement for the older style Eurocopter factory vents 350A72-0315-02 & -03. This is for aircraft that are pre-mod 350A-07-2617. This assembly mounts to holes that are 6.95 in. (177mm) apart lengthwise (longitudinally). See Figure 25-1 for assembly diagrams and Figure 25-5 for wiring diagrams for this model.

- **D350-833-013 Dome Light Air Vent**

A direct replacement to Eurocopter factory vents 350A08-4126-0601 & -0701. This is for aircraft that are post-mod 350A-07-2617. This assembly has a hole to hole spacing of 7.63 in. (194 mm). See Figure 25-2 for assembly diagrams and Figure 25-5 for wiring diagrams for this model.

- **D350-833-015 Dome Light Air Vent**

A direct replacement to Eurocopter factory AFT vents 350A72-0317-04. This is for aircraft that are post-mod 350A-07-2695. This assembly is the same length as the D350-833-013 but has two additional holes spaced evenly lengthwise. See Figure 25-3 for assembly diagrams and Figure 25-5 for wiring diagrams for this model.

- **D350-833-017 Dome Light Air Vent**

A direct replacement to the newer style Eurocopter factory FWD vents 350A72-0317-05. This is for aircraft that are post-mod 350-07-2695. This air vent has 7 mounting holes. See Figure 25-4 for assembly diagrams and Figure 25-6 for wiring diagrams for this model.

- **D350-833-019 NVIS**

An NVIS "Green A" compliant filter kit option for the dome lights. See Figure 25-7.

The components in the D350-833-011/-013/-15/-017/-019 kits are as defined in the table in Section 25.5 of these instructions. For convenience, only the last three digits of the part number are listed on the top row of each table. The quantity of each component which is included in the D350-833-011 Dome Light Air Vent kit, for example, is as defined in the column labeled -011.

• COPYRIGHT © 2013 BY DART AEROSPACE USA, INC. •
THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.

Revision: 0

01-00-00

4.0 AIRWORTHINESS LIMITATIONS (04-00-00)

The Airworthiness Limitations section is FAA approved and specifies inspection and other maintenance required under Sections 43.16 and 91.403 of the Federal Aviation Regulations unless an alternative program has been FAA approved.

There are no airworthiness limitations associated with this type design change.

• COPYRIGHT © 2013 BY DART AEROSPACE USA, INC. •
THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED
OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.

Revision: 0

04-00-00

5.0 INSPECTION REQUIREMENTS (05-00-00)

5.1. 12 Month/1000 Hour Inspection

Note: For the convenience of scheduling maintenance, the tolerance for scheduled inspection intervals is $\pm 10\%$ (± 1 month or 100 hours) in each case, the subsequent interval will be adjusted to re-establish the original schedule. When an inspection is done more than 10% early, subsequent inspections will be advanced as a required to not exceed the maximum tolerance. Concurrence and final approval of the inspection interval tolerance by the governing civil aviation authority is the responsibility of the owner/operator.

- 5.1.1. Remove the Dome Light Air Vent kit per Section 25.1
- 5.1.2. Inspect the Dome Light Air Vent for corrosion, damage and proper operation.
- 5.1.3. Inspect the Dome Light Air Vent housing for cracks, tearing, hole elongation, or surface damage to the housing structure.
- 5.1.4. If there are cracks or tears greater than 0.125" (3 mm) in length or the attachment holes are elongated by more than 0.025" (0.64 mm) the housing should be replaced.
- 5.1.5. If there is surface damage that is aesthetically displeasing, the housing should be replaced at the customer's discretion.
- 5.1.6. If the D350-833-019 NVIS Filter Kit has been installed:
 - a) Remove the D4907-1 Filter per Section 25.3
 - b) Inspect components for damage.
 - c) If the filter is nicked, scratched, cracked, distorted, or water damaged in any way, it should be replaced.
 - d) If the D4873-1 O-rings are brittle, they should be replaced.
 - e) Reinstall the D4907-1 Filter per Section 25.4
- 5.1.7. Reinstall the Dome Light Air Vent per Section 25.2

5.2. OVERHAUL SCHEDULE

NO COMPONENT OVERHAUL REQUIRED FOR THIS KIT.

8.0 LEVELING AND WEIGHING (08-00-00)

The following table shows the net weight increase associated with the D350-833-011/-013/-015/-017/-019 Dome Light Air Vent kits.

Installation	Weight	LONGITUDINAL				LATERAL	
		Arm FWD	Moment FWD	Arm AFT	Moment AFT	Arm	Moment
D350-833-011 <i>Dome Light Air Vent</i>	0.5 lb 0.23 kg	65.2 in 1.6 m	32.6 lb-in 0.37 m-kg	95.4 in 2.4 m	47.7 in-lb 3.8 m-kg	0 in 0 m	0 lb-in 0 m-kg
D350-833-013 <i>Dome Light Air Vent</i>	0.5 lb 0.23 kg	65.2 in 1.6 m	32.6 lb-in 0.37 m-kg	95.4 in 2.4 m	47.7 in-lb 3.8 m-kg	0 in 0 m	0 lb-in 0 m-kg
D350-833-015 <i>Dome Light Air Vent</i>	0.5 lb 0.23 kg	65.2 in 1.6 m	32.6 lb-in 0.37 m-kg	95.4 in 2.4 m	47.7 in-lb 3.8 m-kg	0 in 0 m	0 lb-in 0 m-kg
D350-833-017 <i>Dome Light Air Vent</i>	0.5 lb 0.23 kg	65.2 in 1.6 m	32.6 lb-in 0.37 m-kg	95.4 in 2.4 m	47.7 in-lb 3.8 m-kg	0 in 0 m	0 lb-in 0 m-kg
D350-833-019 <i>NVIS Filter Kit</i>	0.0 lb 0.00 kg	65.2 in 1.6 m	0.0 lb-in 0.00 m-kg	95.4 in 2.4 m	0.0 lb 0.0 m-kg	0 in 0 m	0 lb-in 0 m-kg

• COPYRIGHT © 2013 BY DART AEROSPACE USA, INC. •
THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED
OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.

Revision: 0

08-00-00

25.0 EQUIPMENT AND FURNISHINGS (25-00-00)**25.1. D350-833-011/-013/-015/-017 Dome Light Air Vent Removal**



- 25.1.1. Remove the D350-833-011/-013/-015/-017 Dome Light Air Vent kit by removing the mounting screws and disconnecting the wiring harness. Retain mounting screws for reinstallation. Refer to Figures 25-1 to 25-4 for assembly details and Figures 25-5 and 25-6 for wiring diagrams.

25.2. D350-833-011/-013/-015/-017 Dome Light Air Vent Reinstallation

- 25.2.1. Connect wiring harness per Figure 25-5 or 25-6 as applicable
- 25.2.2. Mound D350-833-011/-013/-015/-017 Dome Light Air Vent Assembly to the roof using existing fasteners and torque per Table 1. Refer to Figure 25-1 thru 25-4 for assembly details.

Table 1 – Standard Torque

Fastener	Torque (in-lb)	Torque (m-kg)
#6	7-9	0.08-0.10

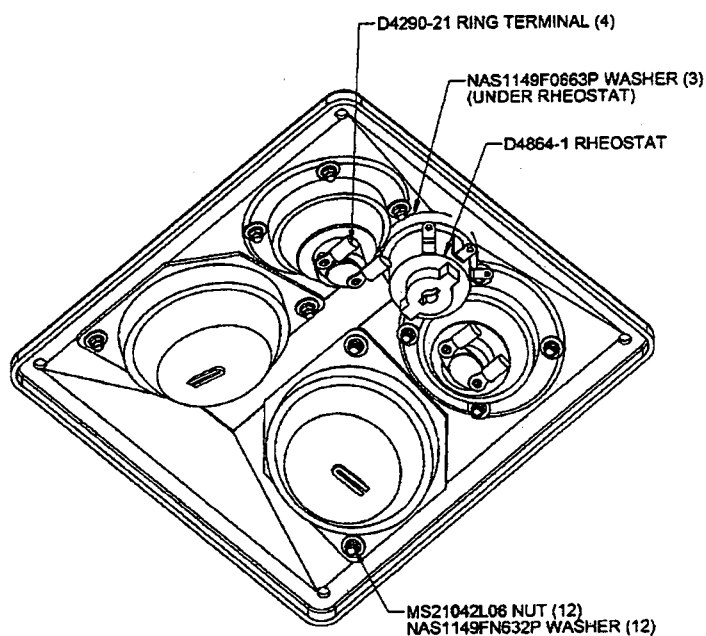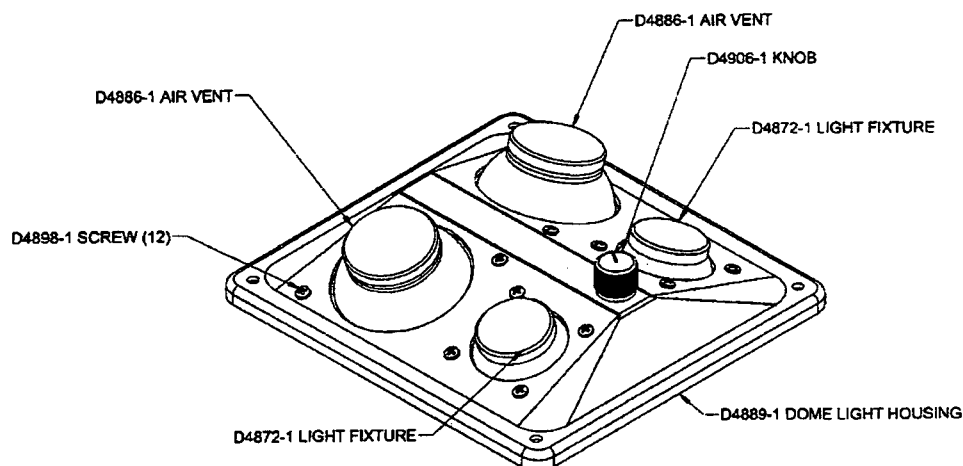

**Figure 25-1 – D350-833-011 Dome Light Air Vent Kit
(Wiring harness not shown for clarity)**

• COPYRIGHT © 2013 BY DART AEROSPACE USA, INC. •
THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.

Revision: 0

25-00-00

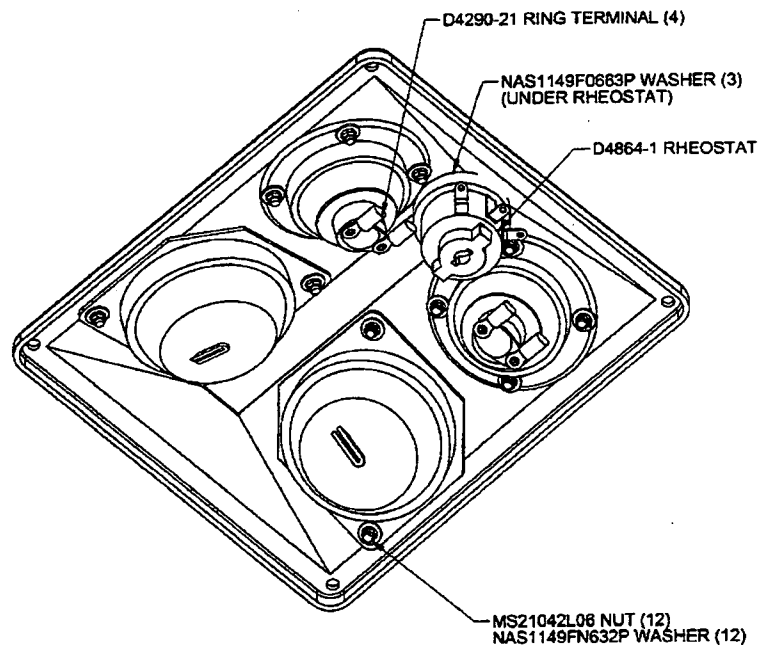
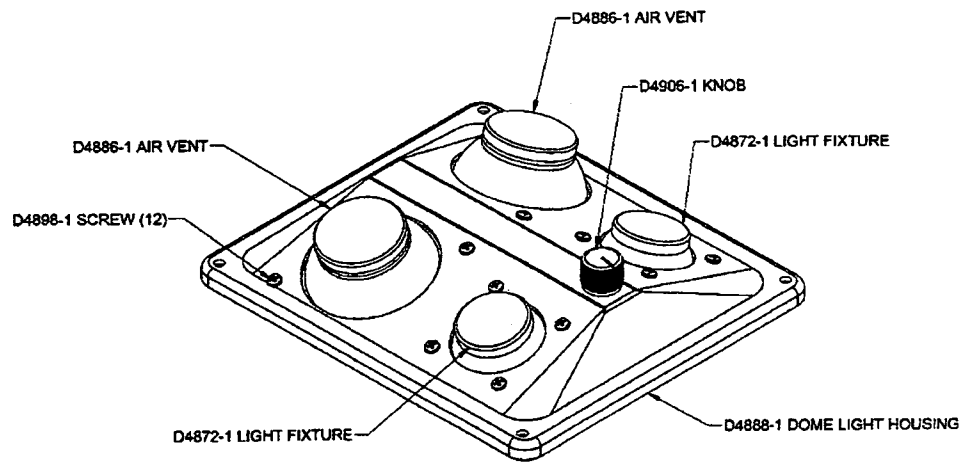


Figure 25-2 – D350-833-013 Dome Light Air Vent Kit
(Wiring harness not shown for clarity)

• COPYRIGHT © 2013 BY DART AEROSPACE USA, INC. •
THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED
OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.

Revision: 0

25-00-00

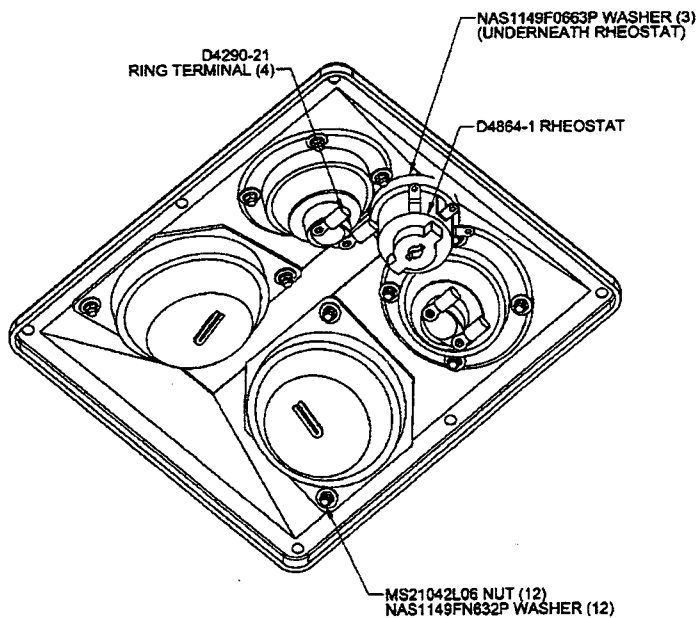
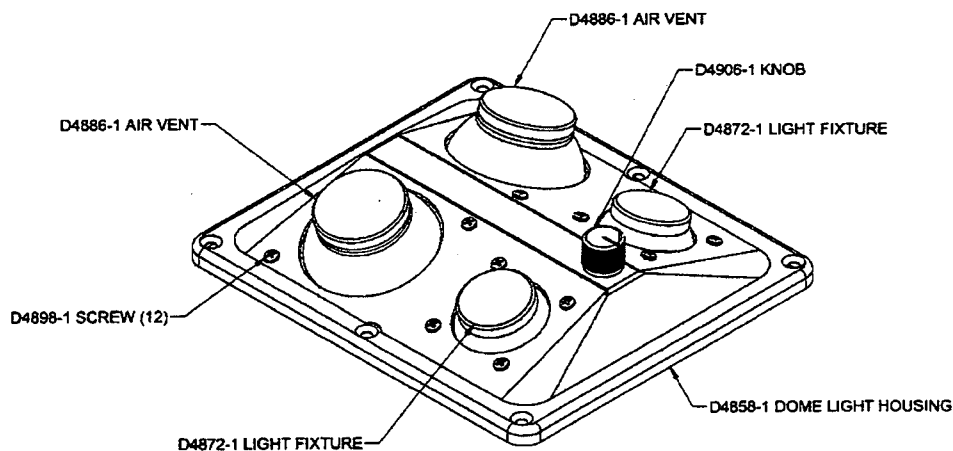


Figure 25-3 – D350-833-015 Dome Light Air Vent Kit
(Wiring harness not shown for clarity)

• COPYRIGHT © 2013 BY DART AEROSPACE USA, INC. •
THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED
OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.

Revision: 0

25-00-00


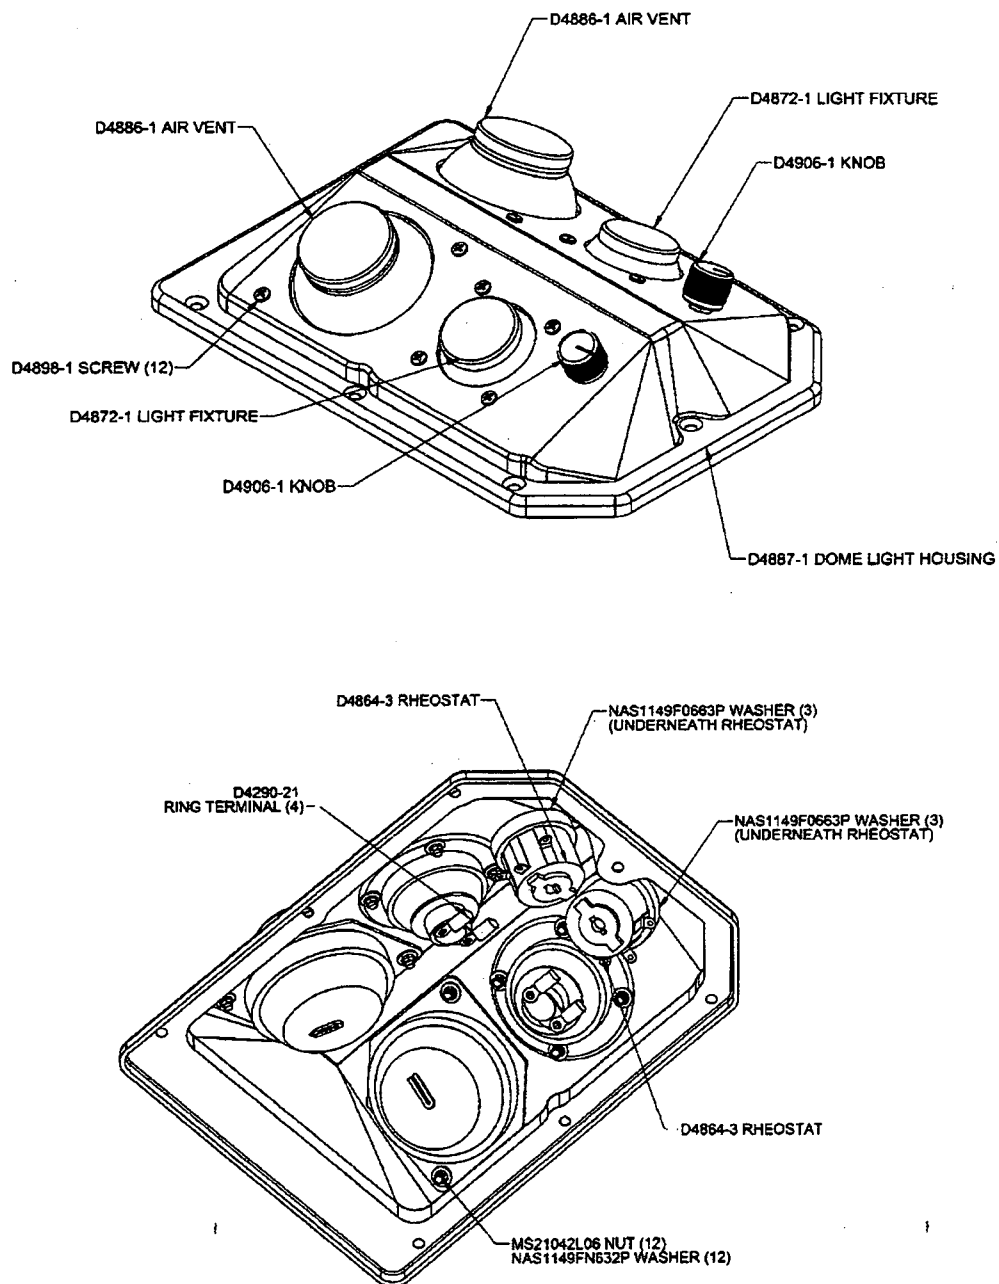


Figure 25-4 – D350-833-017 Dome Light Air Vent Kit
(Wiring harness not shown for clarity)

• COPYRIGHT © 2013 BY DART AEROSPACE USA, INC. •
THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED
OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.

Revision: 0

25-00-00

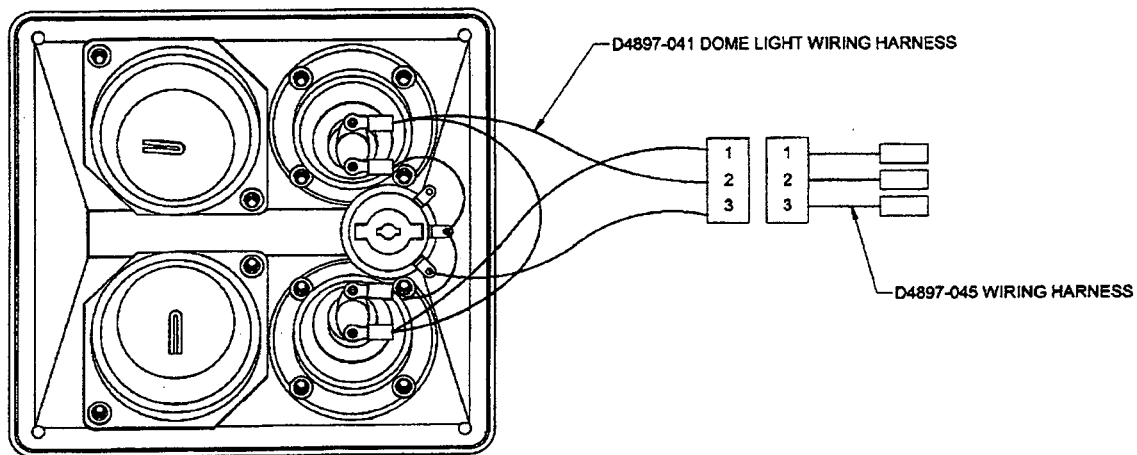


**Figure 25-5 – Dome Light Wiring Diagram for D350-833-011/-013/-015 Installations
(-011 shown, -013/-015 similar) (Sheet 1 of 2)**

• COPYRIGHT © 2013 BY DART AEROSPACE USA, INC. •
THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED
OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.

Revision: 0

25-00-00

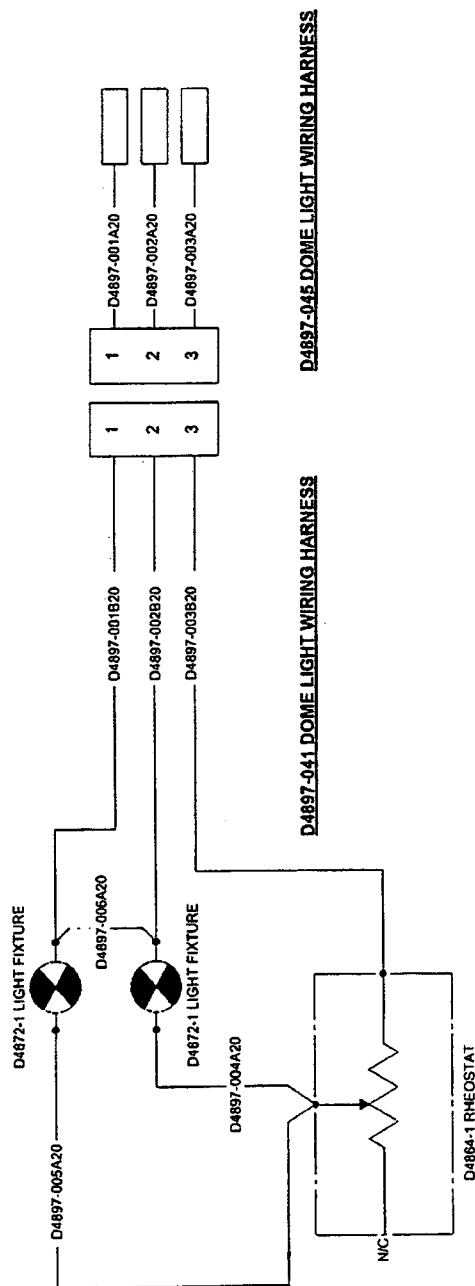


**Figure 25-5 – Dome Light Wiring Diagram for D350-833-011/-013/-015 Installations
(-011 shown, -013/-015 similar) (Sheet 2 of 2)**

• COPYRIGHT © 2013 BY DART AEROSPACE USA, INC. •
THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED
OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.

Revision: 0

25-00-00

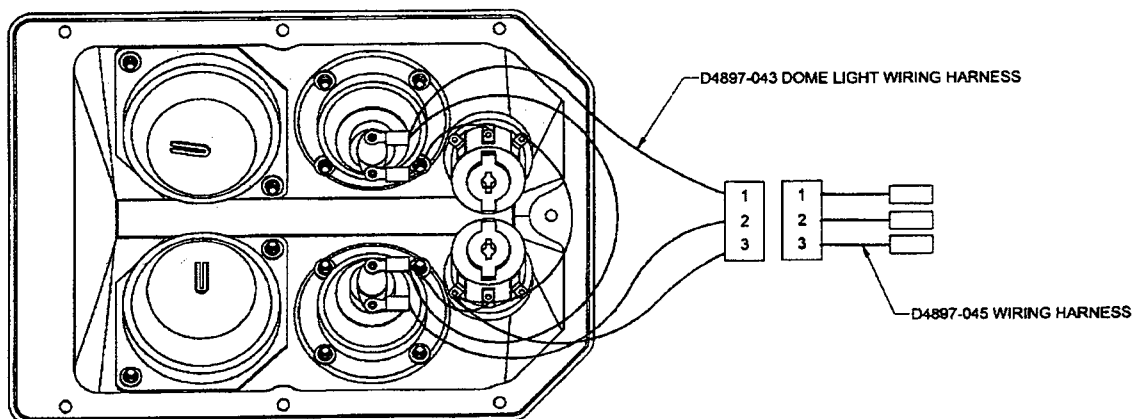


**Figure 25-6 – Dome Light Wiring Diagram for D350-833-017 Installations
(Sheet 1 of 2)**

• COPYRIGHT © 2013 BY DART AEROSPACE USA, INC. •
THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED
OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.

Revision: 0

25-00-00

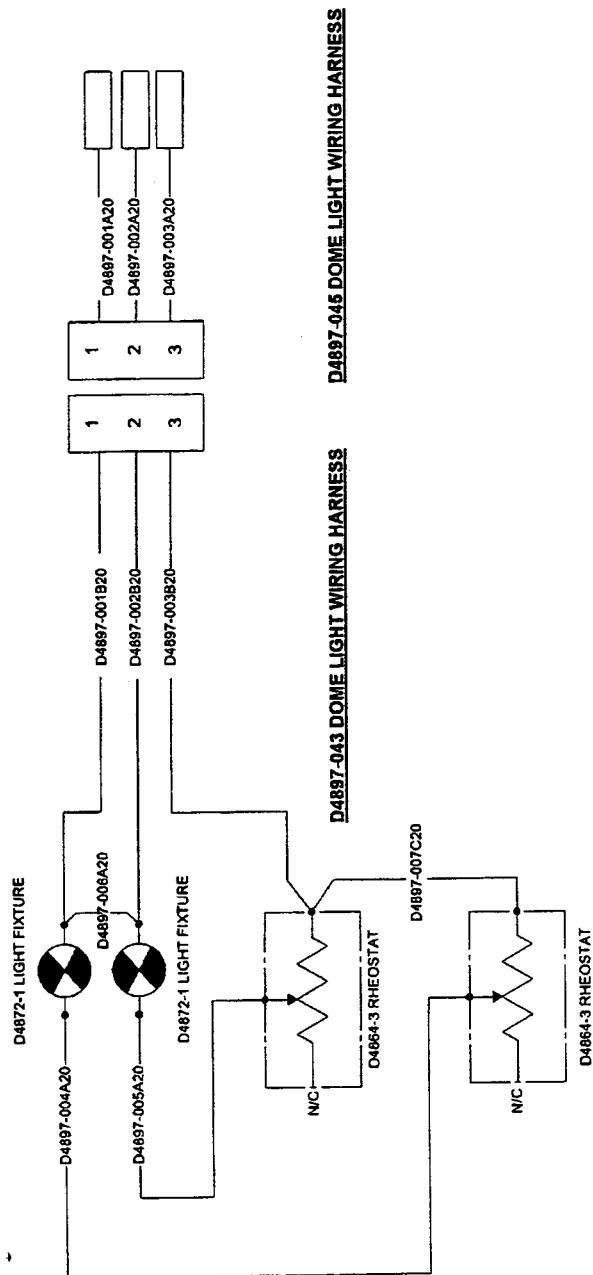

THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.

Revision: 0

25-00-00

25.3. D350-833-019 NVIS Filter Removal

- 25.3.1. Refer to Figure 25-7 for assembly details.
- 25.3.2. Remove lens housing from dome light swivel socket by grasping outer ring and pulling firmly.
- 25.3.3. Remove lens, D4873-1 O-Rings and D4907-1 Filter.

25.4. D350-833-019 NVIS Filter Reinstallation

- 25.4.1. Refer to Figure 25-7 for assembly details.
- 25.4.2. Insert D4907-1 Filter.
- 25.4.3. Insert one D4873-1 O-Ring.
- 25.4.4. Insert lens with pattern side down.
- 25.4.5. Insert remaining 2X D4873-1 O-Rings one at a time. Press them flush against the lens and each other.
- 25.4.6. Reinsert the modified housing assembly firmly into the swivel socket.

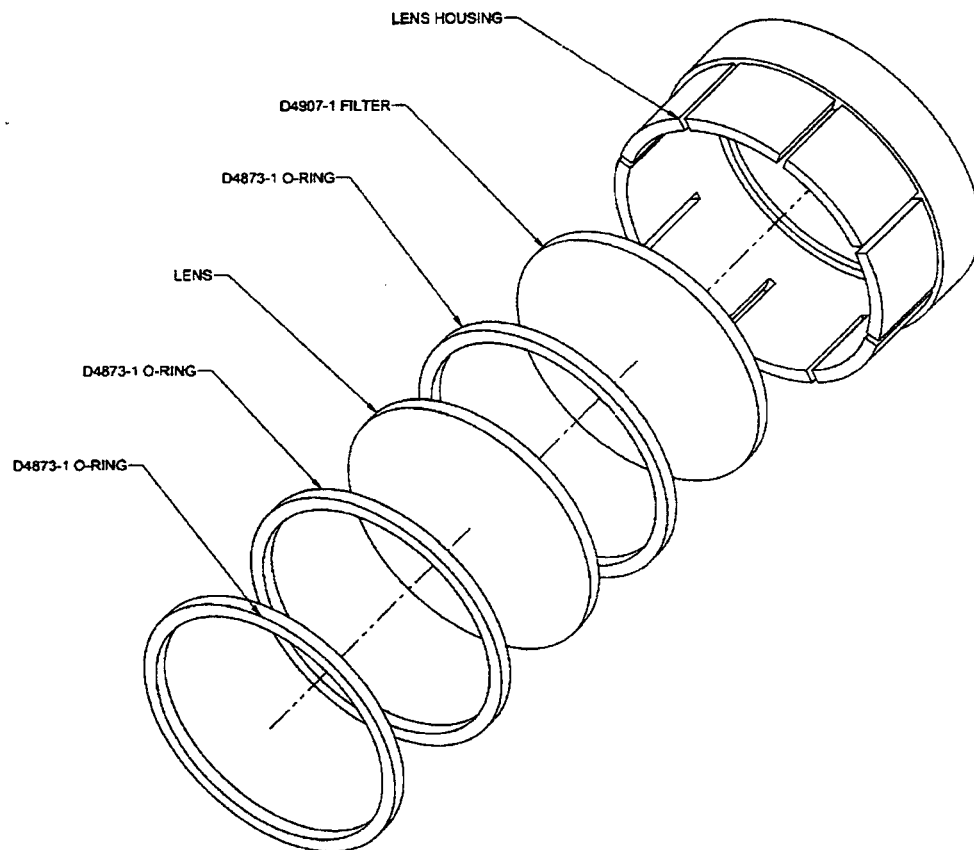


Figure 25-7 - NVIS Filter Installation

• COPYRIGHT © 2013 BY DART AEROSPACE USA, INC. •
THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED
OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.

Revision: 0

25-00-00

25.5. Parts List

Qty -011	Qty -013	Qty -015	Qty -017	Qty -019	Part Number	Description
X					D350-833-011	DOME LIGHT AIR VENT (P112-S)
	X				D350-833-013	DOME LIGHT AIR VENT (P112-L)
		X			D350-833-015	DOME LIGHT AIR VENT (P112-X)
			X		D350-833-017	DOME LIGHT AIR VENT (P112-XL)
				X	D350-833-019	NVIS FILTER KIT
		1			D4858-041	DOME LIGHT AIR VENT ASSY (REPLACES P/N G12983)
				6	D4873-1	O-RING
			1		D4887-041	DOME LIGHT AIR VENT ASSY (REPLACES P/N G12984)
	1				D4888-041	DOME LIGHT AIR VENT ASSY (REPLACES P/N GA129-12)
1					D4889-041	DOME LIGHT AIR VENT ASSY (REPLACES P/N GA129-11)
1	1	1	1		D4897-045	DOME LIGHT WIRING (REPLACES P/N G129-8-2 AND G12989-2)
				2	D4907-1	NVIS FILTER

• COPYRIGHT © 2013 BY DART AEROSPACE USA, INC. •
THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED
OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.

Revision: 0

25-00-00

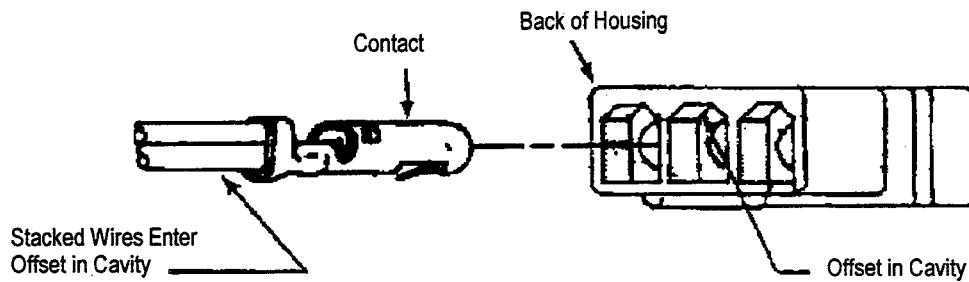


Figure 2

- a. For single-wire leads, push contact into housing as far as it will go. See Figure 1. Pull back lightly on wire to make sure contact is latched in place.
- b. For two-wire leads, first align contact with cavity as shown in Figure 2. Then push contact into housing and check to make sure it is properly inserted.
- c. For contacts crimped to small, flexible wire, use Insertion Tool 91002.



Be sure to stamp cutout from side of panel thru which housing will enter. See Figure 4.

- b. To install plug in panel, squeeze mounting legs together and push plug straight through panel (mating face first) until mounting leg engages panel. See Figure 4.

4. HOUSING ENGAGEMENT AND DISENGAGEMENT

- a. To mate housings, align index ribs on plug and cap and push plug into cap until detents on cap snap into indents in plug. See Figure 1.
- b. To disengage housings, simply pull them apart.

5. PANEL MOUNTING

- a. To mount plug to panel, first stamp cutout in panel using the dimensions in Figure 3.


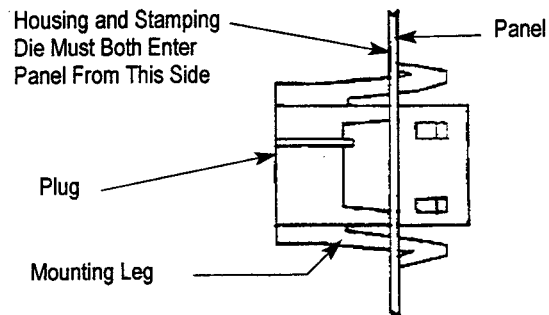


Figure 4

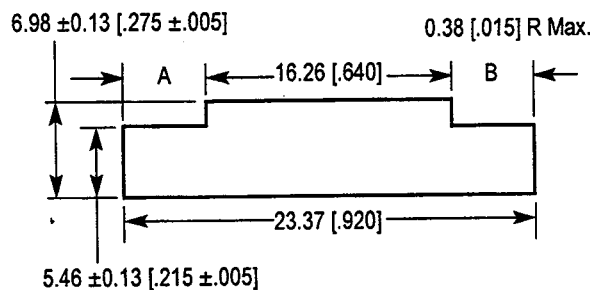

NOTE: Recommended Panel Thickness Range is 0.64-1.65 [.025-.065]. Dimensions A and B to be equal to 0.13 [.005].


Figure 3

6. CONTACT EXTRACTION

There are two types of extraction tools available. Use TE Tool 465644-1 to extract both pin and socket contacts when you can clearly see contacts as you look into front of housing and can easily reach rear of housing. If either view or access is restricted, use TE Tools 1-305183-1 (for pin contacts), and 1-305183-2 (for socket contacts).

7. REVISION SUMMARY

- Updated document to corporate requirements
- New logo

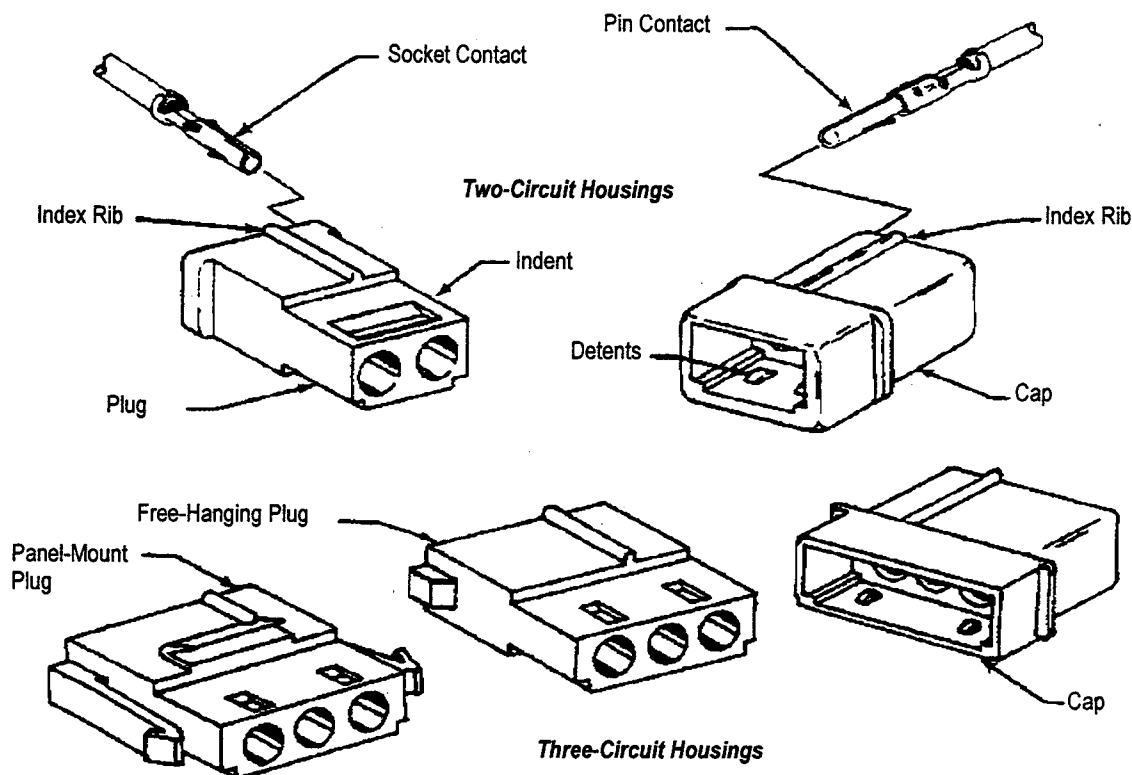

NUMBER OF CIRCUITS	PLUG NUMBER	CAP NUMBER	CONNECTOR TYPE
2	480318-[]	480319-[]	Free-Hanging
2	480393-[]	—	Free-Hanging
3	480303-[]	480305-[]	Free-Hanging
3	480304-[]	480305-[]	Panel-Mount
3	480388-[]	480387-[]	Free-Hanging

Figure 1

1. INTRODUCTION

Each MATE-N-LOK Connector consists of two housings (a plug and a cap) and pin and socket contacts. The plug accepts socket contacts. See Figure 1. Read these instructions carefully before assembling the connector.

2. CONTACT CRIMPING

a. To determine which contacts to use in these housings, refer to TE Connectivity Instruction Sheet 408-7300.

b. Crimp contacts in strip form using the proper auto-machine applicator according to the instruction sheet shipped with the applicator.


c. Crimp loose piece (lp) contacts with the proper hand tool.

3. CONTACT INSERTION



Use pins only in cap. Use sockets only in plug.

ITEM NO.	QTY -045	PART NUMBER	DESCRIPTION	SUPPLIER
1	X	D4897-045	DOME LIGHT WIRING HARNESS	DART
2	1	1-480303-0	CONNECTOR, SOCKET	AMP
3	3	60617-1	CONTACT, SOCKET	AMP
4	3	8-320559-2	SPLICE	AMP

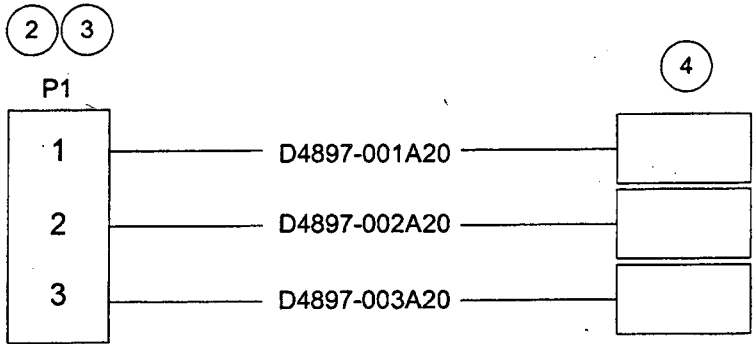

WIRE NUMBER	LENGTH (in)
D4897-001A20	4.0
D4897-002A20	4.0
D4897-003A20	4.0

D4897-045 DOME LIGHT WIRING HARNESS

RELEASED
2013-09-16

- NOTES:
- 1) ALL NEW UNSHIELDED WIRE USE M22759/41-xx-9 TYPE WIRE UNLESS OTHERWISE SPECIFIED
 - 2) ALL WIRES 20 AWG UNLESS OTHERWISE SPECIFIED
 - 3) IDENTIFY/CODE ALL WIRES AND CABLES IN ACCORDANCE WITH AC43.13-1B, SECTION 16, WIRE MARKING
 - 4) KEEP ALL JUMPERS AS SHORT AS POSSIBLE.
 - 5) ALL TERMINALS TO BE INSTALLED IN ACCORDANCE WITH EUROCOPTER STANDARD PRACTICES MANUAL 20.80.20
 - 6) ALL CONNECTORS TO BE INSTALLED IN ACCORDANCE WITH TYCO ELECTRONICS INSTRUCTION SHEET 408-7201 DETENT-ENGAGEMENT MATE-N-LOCK CONNECTORS
 - 7) ROUTE ALL WIRES AND CABLES IN ACCORDANCE WITH CHAPTER 98 OF ICA129-2.
 - 8) UNITS: INCHES UNLESS OTHERWISE NOTED.
 - 9) IDENTIFY CONNECTORS WITH SHRINK SLEEVE LABELS IN ACCORDANCE WITH AC43.13-1B, SECTION 16, WIRE MARKING

DESIGN	OS	DART AEROSPACE USA, INC.	
DRAWN	OS	KENT, WA	
CHECKED	CB	DRAWING NO.	REV. A
MFG. APPR.	W	D4897	SHEET 3 OF 3
APPROVED	JS	TITLE	SCALE
DE APPR.	JH	DOME LIGHT WIRING HARNESS	Nts
DATE	13.07.24	COPYRIGHT © 2013 BY DART AEROSPACE USA, INC. THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.	